


Exterior Garden Spike Spot Lighting

Please read user manual before commencing installation and keep it for future reference.

■WARNING.

1. The safety of this lighting fixture is guaranteed only if you comply with these instructions.
2. Don't connect these lights to the mains supply directly, and please use the specific proper driver with specific input voltage.
3. The driver must be electronic switching power supply with constant voltage output, must not be magnetic transformer.
4. Please disconnect the power before repair, installation or replacement.
5. Please use the lights in the proper application places as to avoid the lights be broken.
6. Do not locate fixtures in low areas where water will collect.
7. If any questions on this instruction, please consult a professional qualified technicians.

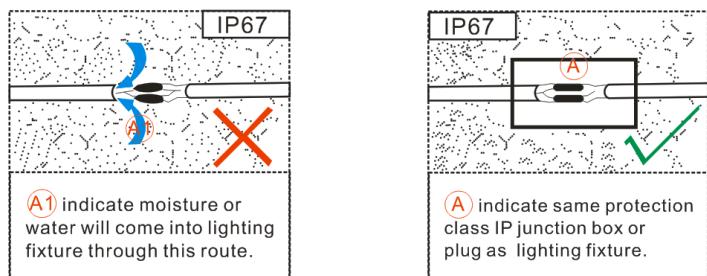


■Instructions of installation.

1. Ensure mains supply is switched off.
2. Unpack the packaging carefully.

---Spike installation

3. Select a suitable location for your spotlight.
4. Insert the ground stake into the soil.
- Note: If the ground is hard or installation is difficult, thoroughly wet the ground where you wish to install the spike using a garden hose or watering can.
5. Carefully assemble the light bracket section on the ground stake with the provided screws.
7. Adjust the tilt of the light for a suitable direction for your application.
8. Use the IP67 or IP68 waterproof connector to connect the cables of the fixture and the cables of specific driver in parallel circuit.
9. Ensure everything is installed very well, and then turn on the power for the illumination application.

Note: The power of main supply must be switched off before connecting the cables.

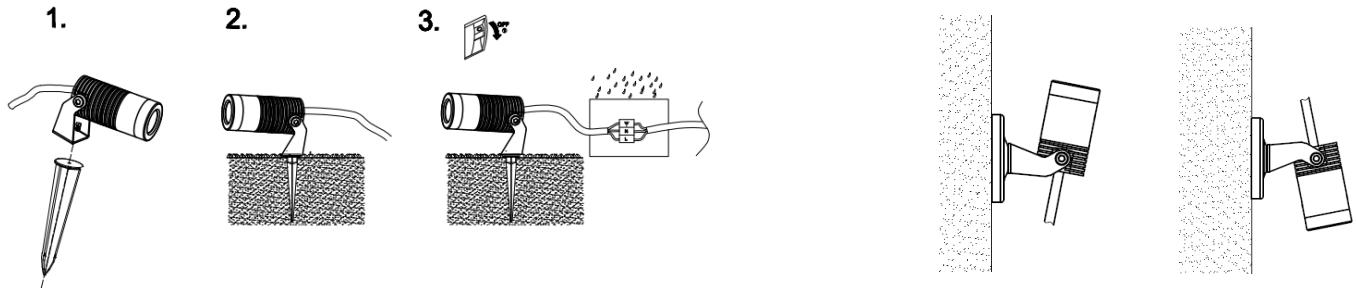

---- With the round base for wall installation

3. Drill three screw holes as the drawing with cut out 6mm.
4. Fix the round base on the wall with the provided screws as drawing
5. Adjust the tilt of the light for a suitable direction for your application.
6. Use the IP67 or IP68 waterproof connector to connect the cables of the fixture and the cables of specific driver in parallel

circuit.

7. Ensure everything is installed very well, and then turn on the power for the illumination application.

■ Specifications.

Input: AC12V

IP rating: IP67

Class: III



Warning.

The non-professionals can not disassemble or repair the fixture. We keep the right to refuse the replacement or repairing of the fixtures that have been disassembled or repaired personally.